

Ball & Doggett

Call or email us for enquiries
or to place an order:



Supa Rollers

1800 497 122

ballanddoggett.com.au

graphics@ballanddoggett.com.au


Heidelberg GTO 52

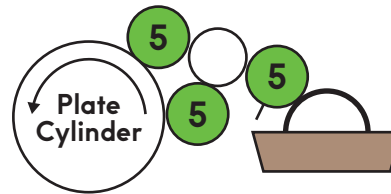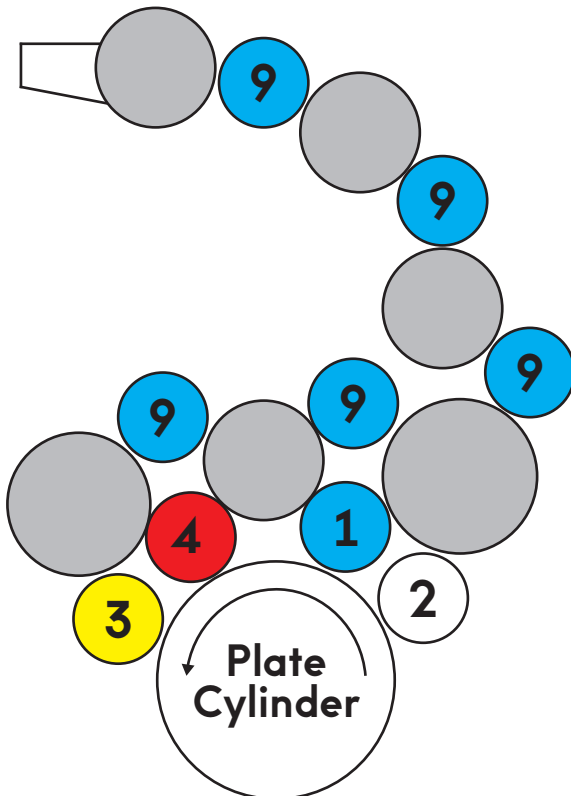

Conventional Water System

Damper forms can be
Molleton, 3m or Bareback

For placement of rollers only.
Please refer to Heidelberg
manufacturer's specifications

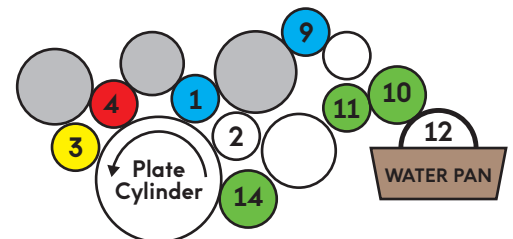

(DDS) Direct Dampening System

ITEM	ROLLER POSITION	ROLLER COLOUR	ROLLER DESCRIPTION	QTY	OD	FL	OAL
						(mm)	
182807	2	White	Ink Form White	1	47	513	596
182809	1,9	Blue	Ink Form / Dist / Duct	6	45	513	596
175524	4	Red	Ink Form	1	51	513	596
182808	3	Yellow	Ink Form	1	49	513	596
182810	5	Green	Damp Form	1	46	523	596
182811	5	Green	Damp Duct	1	46	523	596
175525	5	Green	Bare Back (twin groove)	1	51	531	596
175526			Kompac Varn Form (exchange)	1	57.4	520	
193981			Numbering Roller	5	32	500	500
193995			Roller GTO46 Set= one box (9) pcs	9			
194081			Roller DDS Water Form	1	55.5	775	
194080			Roller DDS Water Metering	1	55.5	533	
194079			Roller DDS Transfer	1	41	520	


Ball & Doggett

Call or email us for enquiries
or to place an order:

Supa Rollers

1800 497 122
ballanddoggett.com.au
graphics@ballanddoggett.com.au

Heidelberg GTO 46

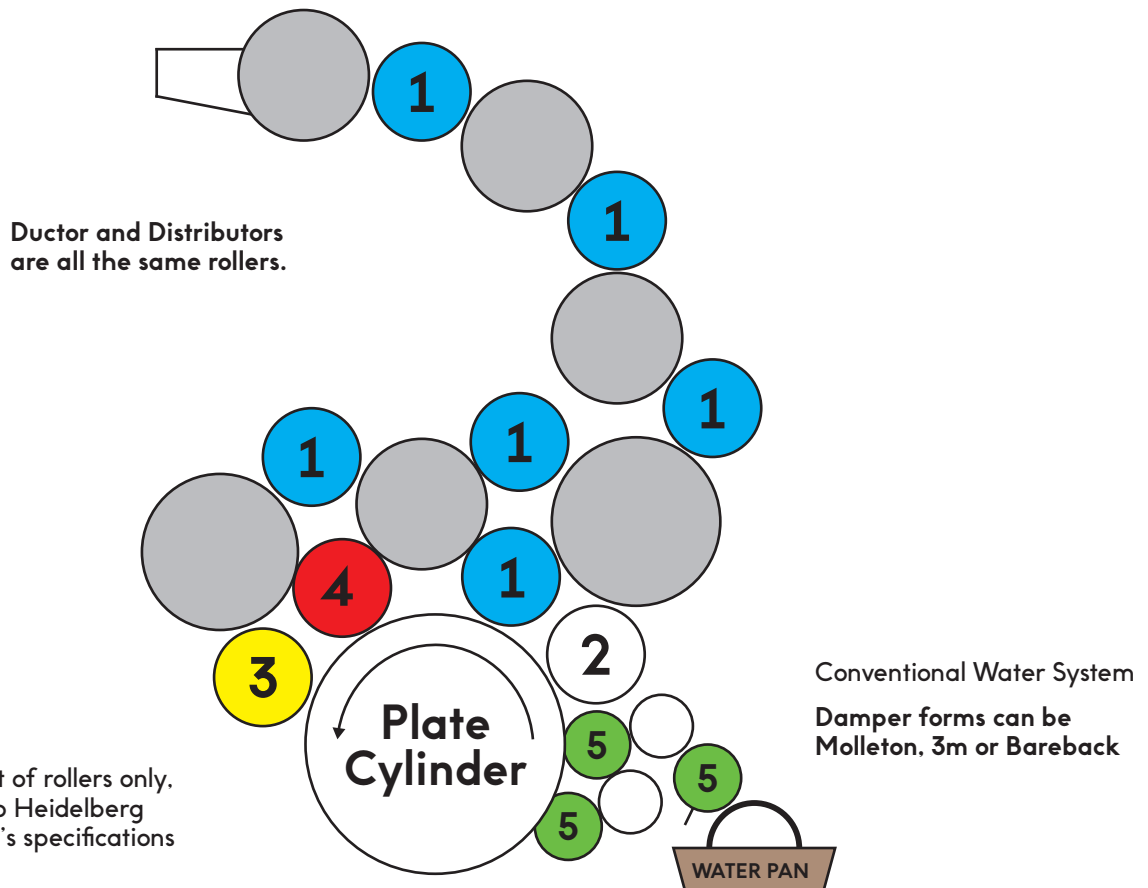

ITEM	ROLLER POSITION	ROLLER COLOUR	ROLLER DESCRIPTION	QTY	OD	FL	OAL
						(mm)	
193985	2	White	Ink Form White	1	47	453	536
193989	1	Blue	Ink Form / Dist / Duct	6	45	454	536
193983	4	Red	Ink Form	1	51	453	536
193984	3	Yellow	Ink Form	1	49	453	536
19435	5	Green	Damp Form	2	46	463	536
193986	5	Green	Damp Duct	1	46	463	536
193991	5	Green	Bare Back (twin groove)	1	51	524	536
194082			Kompac Varn Form (exchange)	1	57.4	460	
193987			Numbering Roller	5	32	400	400
193990			Roller GTO46 Set= one box (9) pcs	9			